

Note

Implement the installation, fuse protection, mains isolator, emergency stop switches and protective measures in accordance with local/national regulations.

NOTE! Never use the earth yellow/green conductor as control line. Ensure the power is connected to the correct phases. Never use plugs with earth contacts.

- ♦ The total current must not exceed 10A.
Recommended connecting cables inside the cable trunking H05VV-F3G 1.0 mm² or H05VV-F4G 1.0 mm².
 - ♦ Only one MEC2 can be allocated to each control unit.
 - ♦ The MEC2 may be plugged into the controller module or be connected via the room installation set (accessory) to one of the FM modules.
- 1) When connecting several ECOCAN BUS components close switches S1 (terminal resistor) on the NM 482 of both extreme ECOCAN BUS subscribers.
 - 2) A screen is not required for standard applications. (Terminate the screen only at one end)



Control voltage 230V ~



LV

